




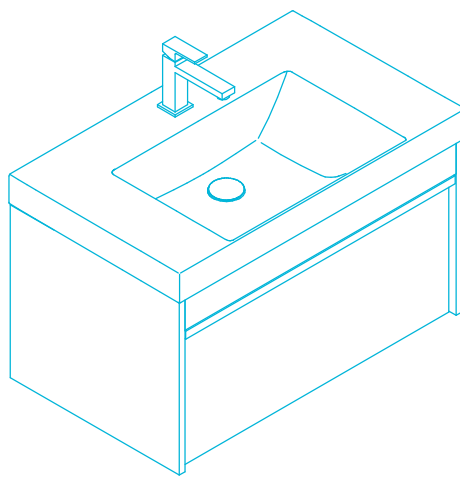


Тумбы Modula МО.60.1+1, МО.70.1+1, МО.80.1+1, МО.100.1+1 Инструкция по установке с раковинами Buongiorno и Cubo

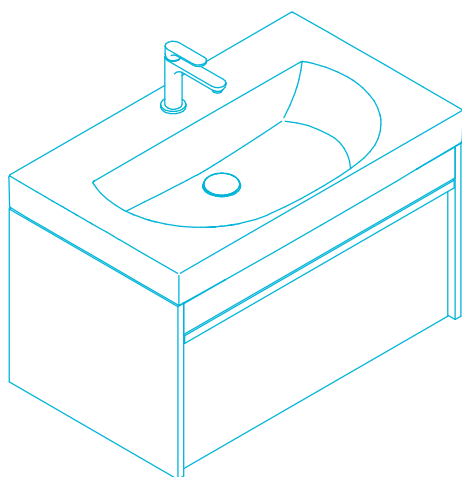

Тумба и раковина	A	B	Z	H
МО.60.1+1 и BG.WB.60	600	593	800	685
МО.80.1+1 и BG.WB.80	800	793	800	685
МО.100.1+1 и BG.WB.100	1000	993	800	685
МО.70.1+1 и CU.WB.70	705	693	795	695
МО.80.1+1 и CU.WB.80	805	793	795	695
МО.100.1+1 и CU.WB.100	1010	993	795	695

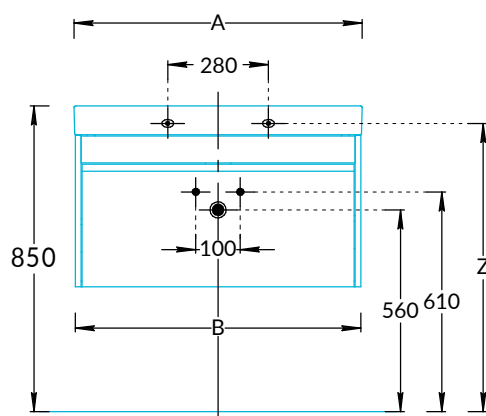


Потребуется дополнительный инвентарь для надежного монтажа изделия, который не входит в комплект поставки.

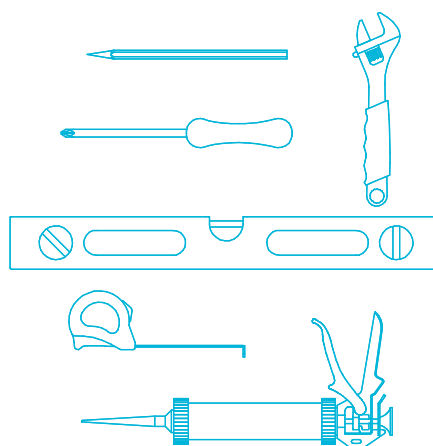


KERAMA MARAZZI


1

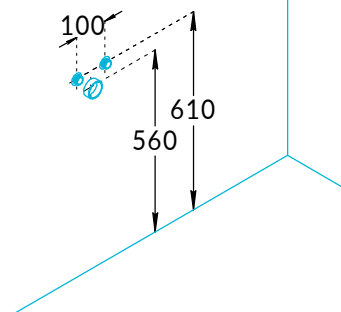


2

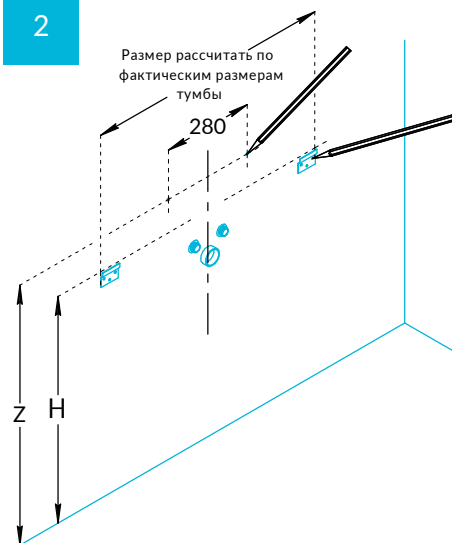


3

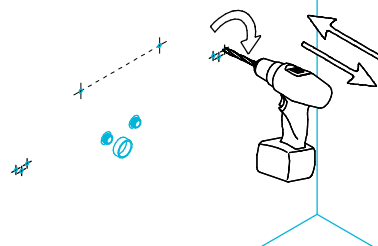


4

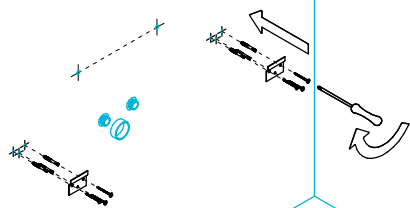


5

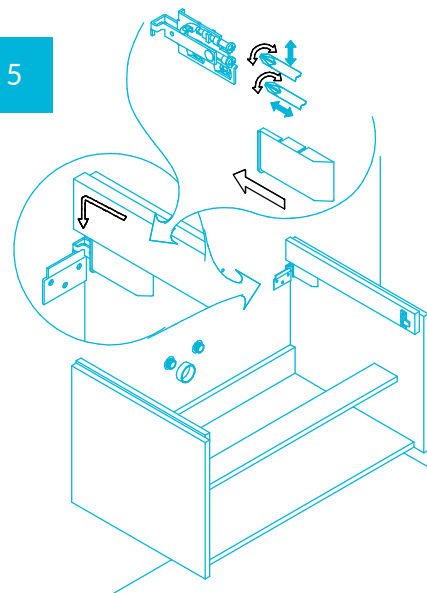

6

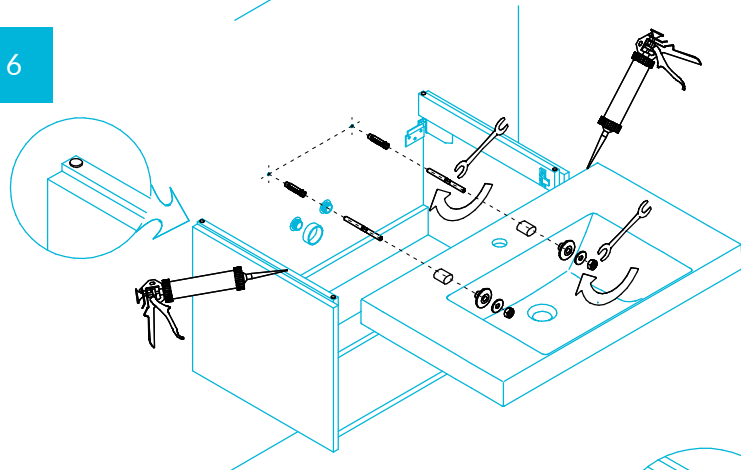

7

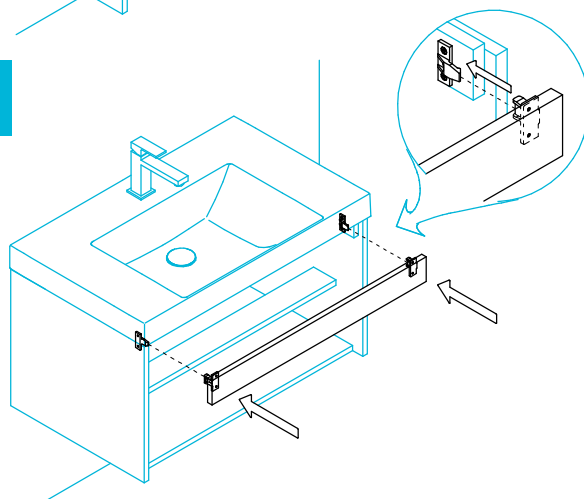

8

